

1U Series DVR Quick Start Guide

Version 3.0

Table of Contents

| | | |
|-------|--|----|
| 1 | Hardware Installation and Connection..... | 1 |
| 1.1 | Check Unpacked DVR..... | 1 |
| 1.2 | About Front Panel and Rear Panel..... | 1 |
| 1.3 | After Remove the Chassis..... | 1 |
| 1.4 | HDD Installation..... | 1 |
| 1.5 | Front Panel..... | 2 |
| 1.5.1 | Standard 1U Series and 16-channel Simple Entry Level Series, Full D1 Entry Level Series and Full D1 Lite Series..... | 2 |
| 1.5.2 | 4/8-channel Simple Entry Level Series and Simple Lite Series..... | 2 |
| 1.6 | Rear Panel..... | 4 |
| 1.6.1 | Standard 1U Series..... | 4 |
| 1.6.2 | Simple Entry Level Series..... | 5 |
| 1.6.3 | Simple Lite Series..... | 6 |
| 1.6.4 | Full D1 Entry Level Series..... | 7 |
| 1.6.5 | Full D1 Lite Series..... | 7 |
| 1.7 | Connection Sample..... | 8 |
| 1.7.1 | Standard 1U series..... | 8 |
| 1.7.2 | Simple Entry Level Series..... | 8 |
| 1.7.3 | Simple Lite Series..... | 9 |
| 1.7.4 | Full D1 Entry Level Series..... | 10 |
| 1.7.5 | Full D1 Lite Series..... | 11 |
| 1.8 | Alarm Input and Output Connection..... | 12 |
| 1.8.1 | Alarm Input and Output Details..... | 12 |
| 1.8.2 | Alarm Input Port..... | 14 |
| 1.8.3 | Alarm Output Port..... | 14 |
| 2 | Overview of Navigation and Controls..... | 15 |
| 2.1 | Login, Logout & Main Menu..... | 15 |
| 2.1.1 | Login..... | 15 |
| 2.1.2 | Main Menu..... | 16 |
| 2.1.3 | Logout..... | 16 |
| 2.1.4 | Auto Resume after Power Failure..... | 17 |
| 2.2 | Live Viewing..... | 17 |

| | | |
|-------|---|----|
| 2.3 | Schedule | 17 |
| 2.4 | Manual Record | 18 |
| 2.5 | Encode | 18 |
| 2.5.1 | Snapshot..... | 20 |
| 2.5.2 | Image FTP..... | 21 |
| 2.6 | Search and Playback | 22 |
| 2.7 | Network Setup..... | 24 |
| 2.8 | Pan/Tilt/Zoom | 25 |
| 2.8.1 | PTZ Setup | 25 |
| 2.8.2 | PTZ Operation | 26 |
| 2.8.3 | 3D Intelligent Positioning Key | 27 |
| 3 | Web Operation..... | 28 |
| 3.1 | Network Connection | 28 |
| 3.2 | Login | 28 |
| 3.3 | Main Window | 29 |
| 4 | Appendix Toxic or Hazardous Materials or Elements | 30 |

Welcome

Thank you for purchasing our DVR!

This quick start guide will help you become familiar with our DVR in a very short time.

Here you can find hardware installation, cable connection information and general operations such as system setup, record, search, backup, alarm setup, PTZ operation, also here you can find web operation instruction.

Before installation and operation, please read the following safeguard and warning carefully!

Important Safeguard and Warning

1 . Electrical safety

All installation and operation here should conform to your local electrical safety codes.

We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.

2 . Transportation security

Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.

3 . Installation

Keep upwards. Handle with care.

Do not apply power to the DVR before completing installation.

Do not place objects on the DVR

4 . Qualified engineers needed

All the examination and repair work should be done by the qualified service engineers.

We are not liable for any problems caused by unauthorized modifications or attempted repair.

5 . Environment

The DVR should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.

This series product shall be transported, installed and use under the environment ranging from 0°C to 40°C.

6. Accessories

Be sure to use all the accessories recommended by manufacturer.

Before installation, please open the package and check all the components are included:

Contact your local retailer ASAP if something is missing in your package.

7. Lithium battery

Improper battery use may result in fire, explosion, or personal injury!

When replace the battery, please make sure you are using the same model!

1 Hardware Installation and Connection

Note: All the installation and operations here should conform to your local electric safety rules.

1.1 Check Unpacked DVR

When you receive the DVR from the forwarding agent, please check whether there is any visible damage. The protective materials used for the package of the DVR can protect most accidental clashes during transportation. Then you can open the box to check the accessories.

Please check the items in accordance with the list on the warranty card (Remote control is optional). Finally you can remove the protective film of the DVR.

Note

Remote control is not a standard accessory and it is not included in the accessory bag.

1.2 About Front Panel and Rear Panel

For detailed information of the function keys in the front panel and the ports in the rear panel, please refer to the *User's Manual* included in the resource CD.

The model in the front panel is very important; please check according to your purchase order. The label in the rear panel is very important too. Usually we need you to represent the serial number when we provide the service after sales.

1.3 After Remove the Chassis

Please check the data cable, power cable, COM cable and main board cable connection is firm or not.

1.4 HDD Installation

This series DVR has only one SATA HDD. Please use HDD of 7200rpm or higher.

You can refer to the *User's Manual* for recommended HDD brand.

Please follow the instructions below to install hard disk.



| | | |
|---|---|---|
| 1. Loosen the screws of the upper cover and side panel. | 2. Fix four screws in the HDD (Turn just three rounds). | 3. Place the HDD in accordance with the four holes in the bottom. |
|---|---|---|



| | | |
|--|------------------------|---|
| 4. Turn the device upside down and then turn the screws in firmly. | 5. Fix the HDD firmly. | 6. Connect the HDD cable and power cable. |
|--|------------------------|---|



| | |
|---|--|
| 7. Put the cover in accordance with the clip and then place the upper cover back. | 8. Secure the screws in the rear panel and the side panel. |
|---|--|

Note:

- You can connect the HDD data cable and the power cable first and then fix the HDD in the device.
- Please pay attention to the front cover. It adopts the vertical sliding design. You need to push the clip first and then put down.

1.5 Front Panel

This series product has two types of front panels.

1.5.1 Standard 1U Series and 16-channel Simple Entry Level Series, Full D1 Entry Level Series and Full D1 Lite Series

This series product front panel is shown as in Figure 1-1.

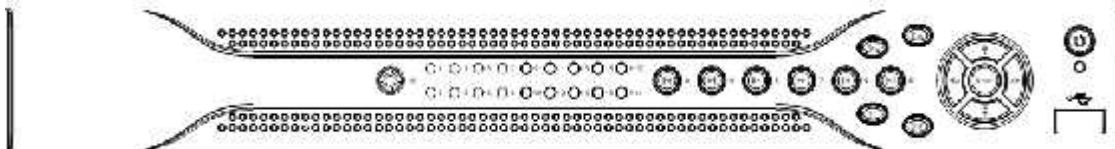


Figure 1-1

1.5.2 4/8-channel Simple Entry Level Series and Simple Lite Series

This series product front panel is shown as in Figure 1-2.

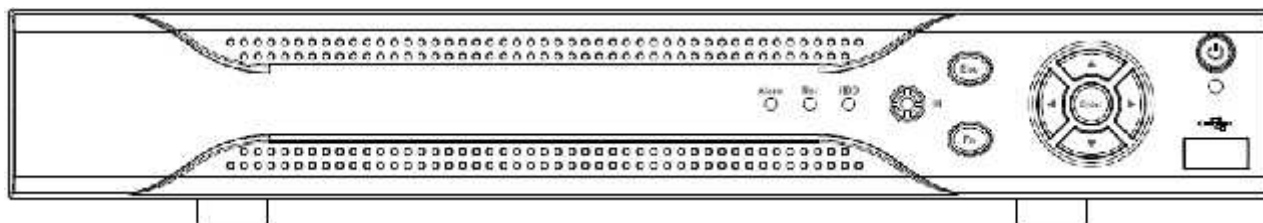




Figure 1-2

Please refer to the following sheet for front panel button information.

| Name | Icon | Function |
|--------------|---|--|
| Power button |  | Power button, press this button for three seconds to boot up or shut down DVR. |

| | | |
|-------------------|-------|--|
| Shift | Shift | In textbox, click this button to switch between numeral, English(Small/Capitalized),donation and etc. |
| Up/1 Down/4 | ▲、▼ | Activate current control, modify setup, and then move up and down. |
| | | Increase/decrease numeral. |
| | | Assistant function such as PTZ menu. |
| | | In text mode, input number 1/4 (English character G/H/I) |
| Left/2 Right/3 | ◀ ▶ | Shift current activated control, |
| | | When playback, click these buttons to control playback bar. In text mode, input number 2(English character A/B/C) /3(English character D/E/F) |
| ESC | ESC | Go to previous menu, or cancel current operation. |
| | | When playback, click it to restore real-time monitor mode. |
| Enter | ENTER | Confirm current operation |
| | | Go to default button |
| | | Go to menu |
| Record | REC | Manually stop/start recording, working with direction keys or numeral keys to select the recording channel. |
| Slow play/8 | ▶ | Multiple slow play speeds or normal playback. In text mode, input number 8 (English character T/U/V). |
| Assistant | Fn | One-window monitor mode, click this button to display assistant function: PTZ control and image color. |
| | | Backspace function: in numeral control or text control, press it for 1.5seconds to delete the previous character before the cursor. |
| | | In motion detection setup, working with Fn and direction keys to realize setup. |
| | | In text mode, click it to switch between numeral, English character(small/capitalized) and etc. |
| | | Realize other special functions. |
| Fast play/7 | ▶▶ | Various fast speeds and normal playback. In text mode, input number 7 (English character P/Q/R/S). |
| Play previous/0 | ◀ | In playback mode, playback the previous video In text mode, input number 0. |
| Reverse/Pause/6 | ◀ | In normal playback or pause mode, click this button to reverse playback In reverse playback, click this button to pause playback. In text mode, input number 6 (English character M/N/O) |

| | | |
|-----------------------------------|---|--|
| Play Next/9 | ▶ | In playback mode, playback the next video In menu setup, go to down ward of the dropdown list. In text mode, input number 9 (English character W/X/Y/Z) |
| Play/Pause /5 | ▶ II | In normal playback click this button to pause playback In pause mode, click this button to resume playback. In text mode, input number 5(English character J/K/L). |
| USB port |  | To connect USB storage device, USB mouse. |
| Network abnormal indication light | Net | Network error occurs or there is no network connection, the light becomes red to alert you. |
| HDD abnormal indication light | HDD | HDD error occurs or HDD capacity is below specified threshold value, the light becomes red to alert you. |
| Record light | 1-16 | System is recording or not. It becomes on when system is recording. |
| IR Receiver | IR | It is to receive the signal from the remote control. |
| Alarm indication light | Alarm | Here you can view there is external alarm input or not. The light becomes on when there is an external alarm. The light become off when the external alarm stops. |

1.6 Rear Panel

1.6.1 Standard 1U Series

The standard 1U series product rear panel is shown as below. See Figure 1-3 through Figure 1-5 .

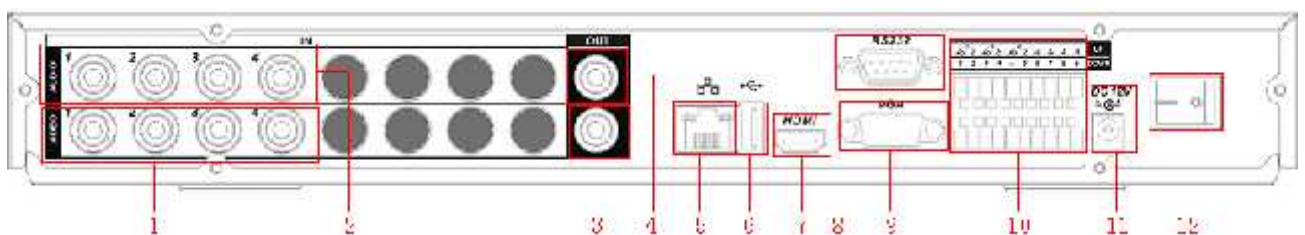


Figure 1-3 4-channel

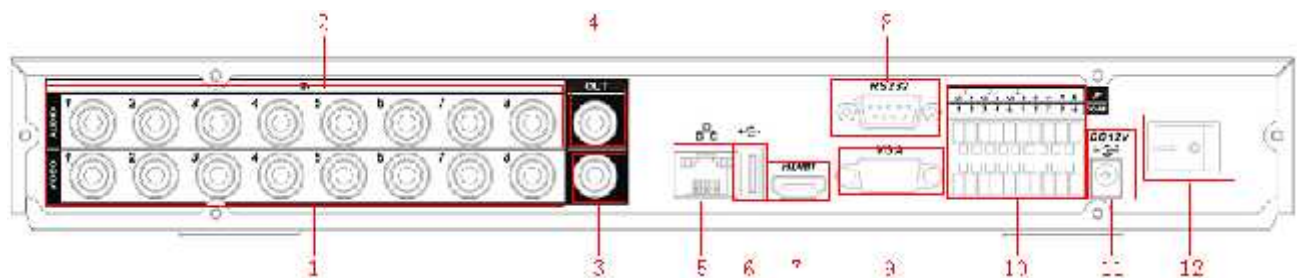


Figure 1-4 8-channel

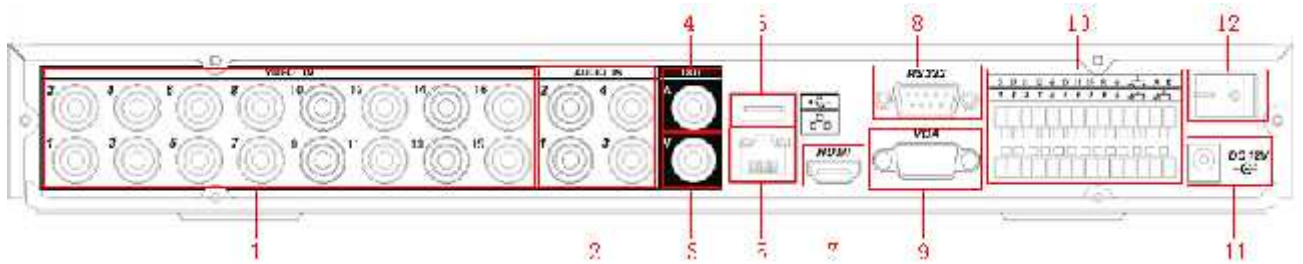


Figure 1-5 16-channel

Please refer to the following sheet for detailed information.

| | |
|----|-------------------------------------|
| 1 | Video input |
| 2 | Audio input |
| 3 | Video CVBS output |
| 4 | Audio output |
| 5 | Network port |
| 6 | USB port |
| 7 | HDMI port |
| 8 | RS232 port |
| 9 | Video VGA output |
| 10 | Alarm input/alarm output/RS485 port |
| 11 | Power input port |
| 12 | Power button |

1.6.2 Simple Entry Level Series

Simple entry level series real panel (4/8-channel) is shown as below. See Figure 1-6 and Figure 1-7.

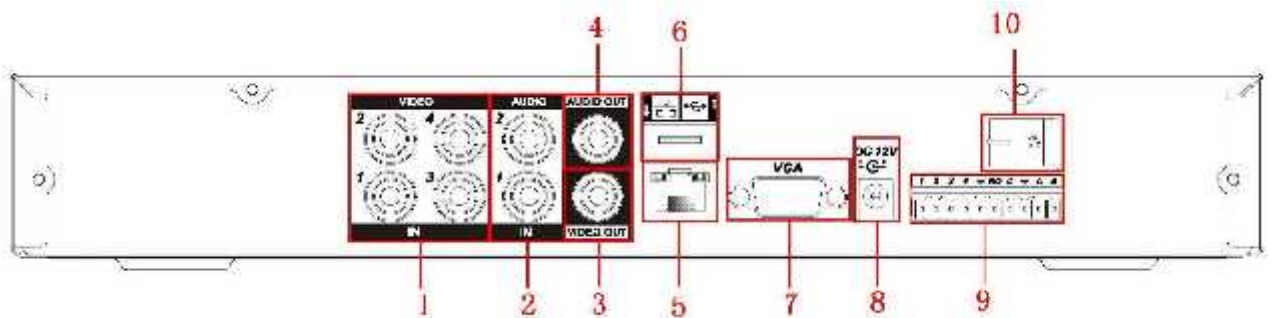


Figure 1-6 4-channel

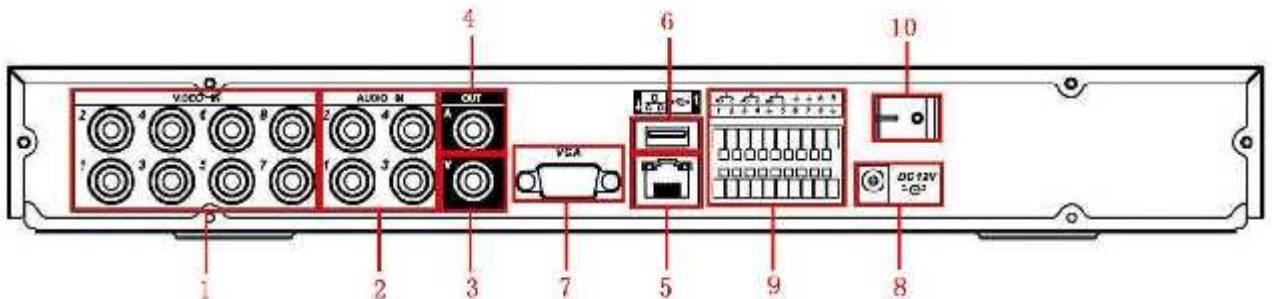


Figure 1-7 8-channel

Please refer to the following sheet for detailed information.

| | |
|---|-------------------|
| 1 | Video input |
| 2 | Audio input |
| 3 | Video CVBS output |
| 4 | Audio output |

| | |
|----|-------------------------------------|
| 5 | Network port |
| 6 | USB port |
| 7 | Video VGA output |
| 8 | Power input port |
| 9 | Alarm input/alarm output/RS485 port |
| 10 | Power button |

Simple entry level series rear panel (16-channel) is shown as below. See Figure 1-8.

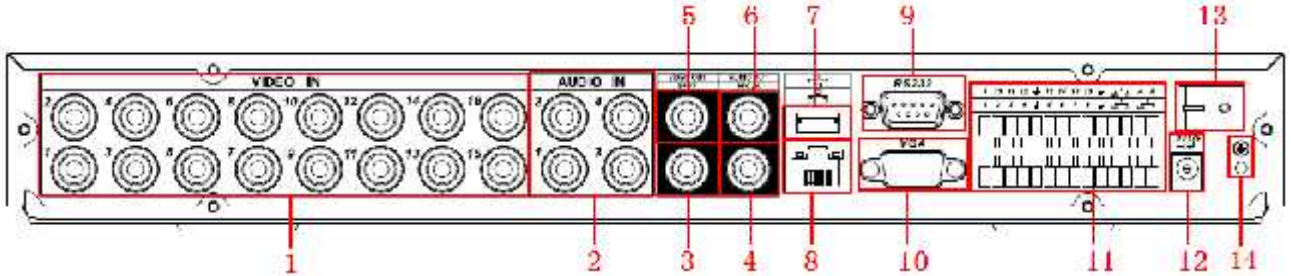


Figure 1-8

Please refer to the following sheet for detailed information.

| | |
|----|-------------------------------------|
| 1 | Video input |
| 2 | Audio input |
| 3 | Video spot output |
| 4 | Bidirectional talk input |
| 5 | Video CVBS output |
| 6 | Audio output |
| 7 | USB port |
| 8 | Network port |
| 9 | RS232 port |
| 10 | Video VGA output |
| 11 | Alarm input/alarm output/RS485 port |
| 12 | Power socket |
| 13 | On/off button |
| 14 | GND port |

Important

The bidirectional talk input port of this series product needs the active MIC.

1.6.3 Simple Lite Series

Simple lite series product rear panel is shown as in Figure 1-9.

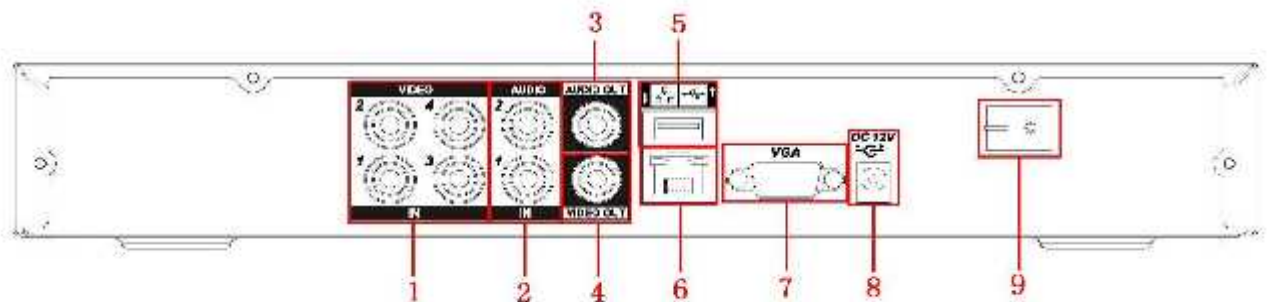


Figure 1-9

Please refer to the following sheet for detailed information.

| | |
|---|-------------------|
| 1 | Video input |
| 2 | Audio input |
| 3 | Audio output |
| 4 | Video CVBS output |
| 5 | USB port |

| | |
|---|------------------|
| 6 | Network port |
| 7 | Video VGA output |
| 8 | Power input port |
| 9 | Power button |

1.6.4 Full D1 Entry Level Series

The rear panel is shown as in Figure 1-10.

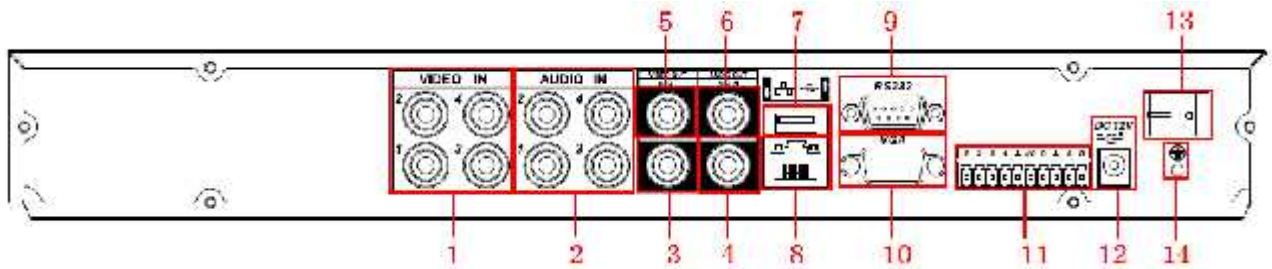


Figure 1-10

Please refer to the following sheet for detailed information.

| | |
|----|-------------------------------------|
| 1 | Video input |
| 2 | Audio input |
| 3 | Video spot output |
| 4 | Bidirectional talk input |
| 5 | Video CVBS output |
| 6 | Audio output |
| 7 | USB port |
| 8 | Network port |
| 9 | RS232 port |
| 10 | Video VGA output |
| 11 | Alarm input/alarm output/RS485 port |
| 12 | Power socket |
| 13 | On/off button |
| 14 | GND port |

Important

The bidirectional talk input port of this series product needs the active MIC.

1.6.5 Full D1 Lite Series

The rear panel is shown as below. See Figure 1-11.

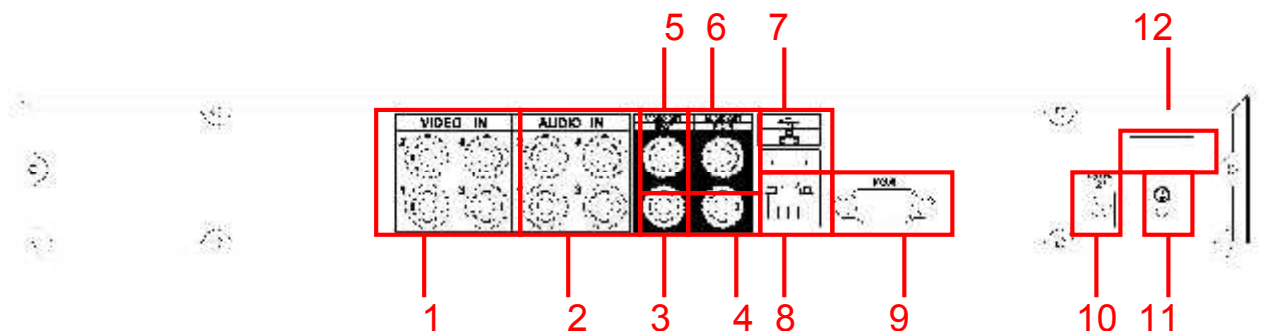


Figure 1-11

Please refer to the following sheet for detailed information.

| | |
|---|-------------|
| 1 | Video input |
| 2 | Audio input |

| | |
|----|--------------------------|
| 3 | Video spot output |
| 4 | Bidirectional talk input |
| 5 | Video output |
| 6 | Audio output |
| 7 | USB port |
| 8 | Network port |
| 9 | VGA |
| 10 | Power socket |
| 11 | GND port |
| 12 | On/off button |

When connect the Ethernet port, please use crossover cable to connect the PC and use the straight cable to connect to the switcher or router.

1.7 Connection Sample

1.7.1 Standard 1U series

Please refer to Figure 1-12 for standard 1U series product connection sample.

The following figure is based on one 8-channel series.

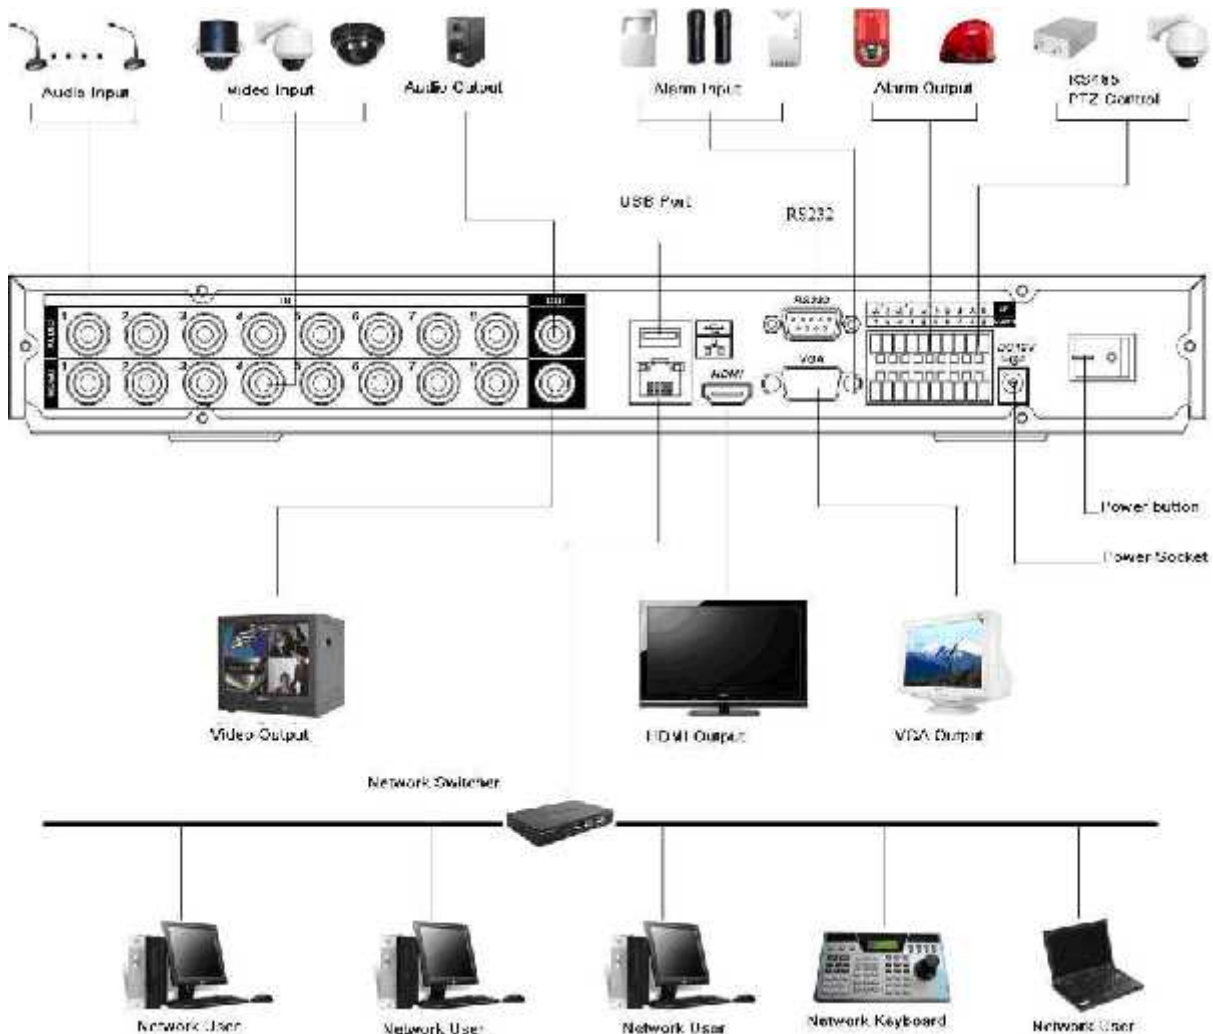


Figure 1-12

1.7.2 Simple Entry Level Series

Please refer to Figure 1-13 for simple entry level series product connection sample.

The following figure is based on one 4-channel series.

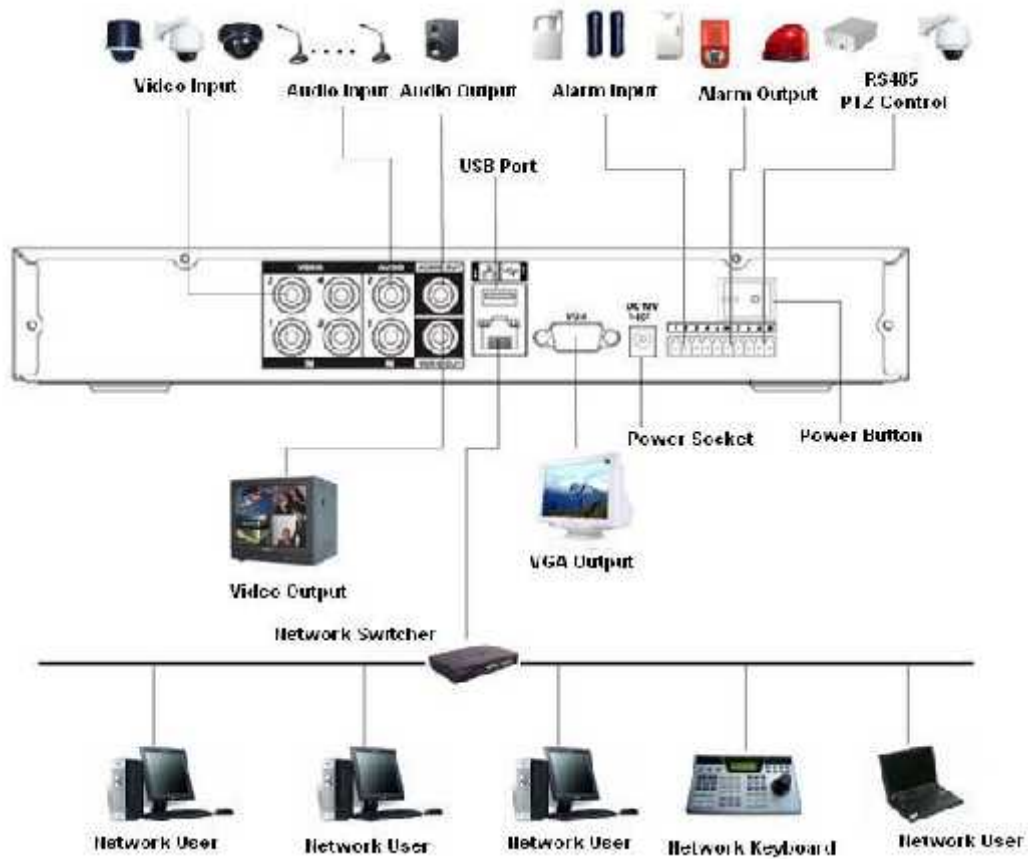


Figure 1-13

1.7.3 Simple Lite Series

Please refer to Figure 1-14 for simple lite series product connection sample.

The following figure is based on one 4-channel series.

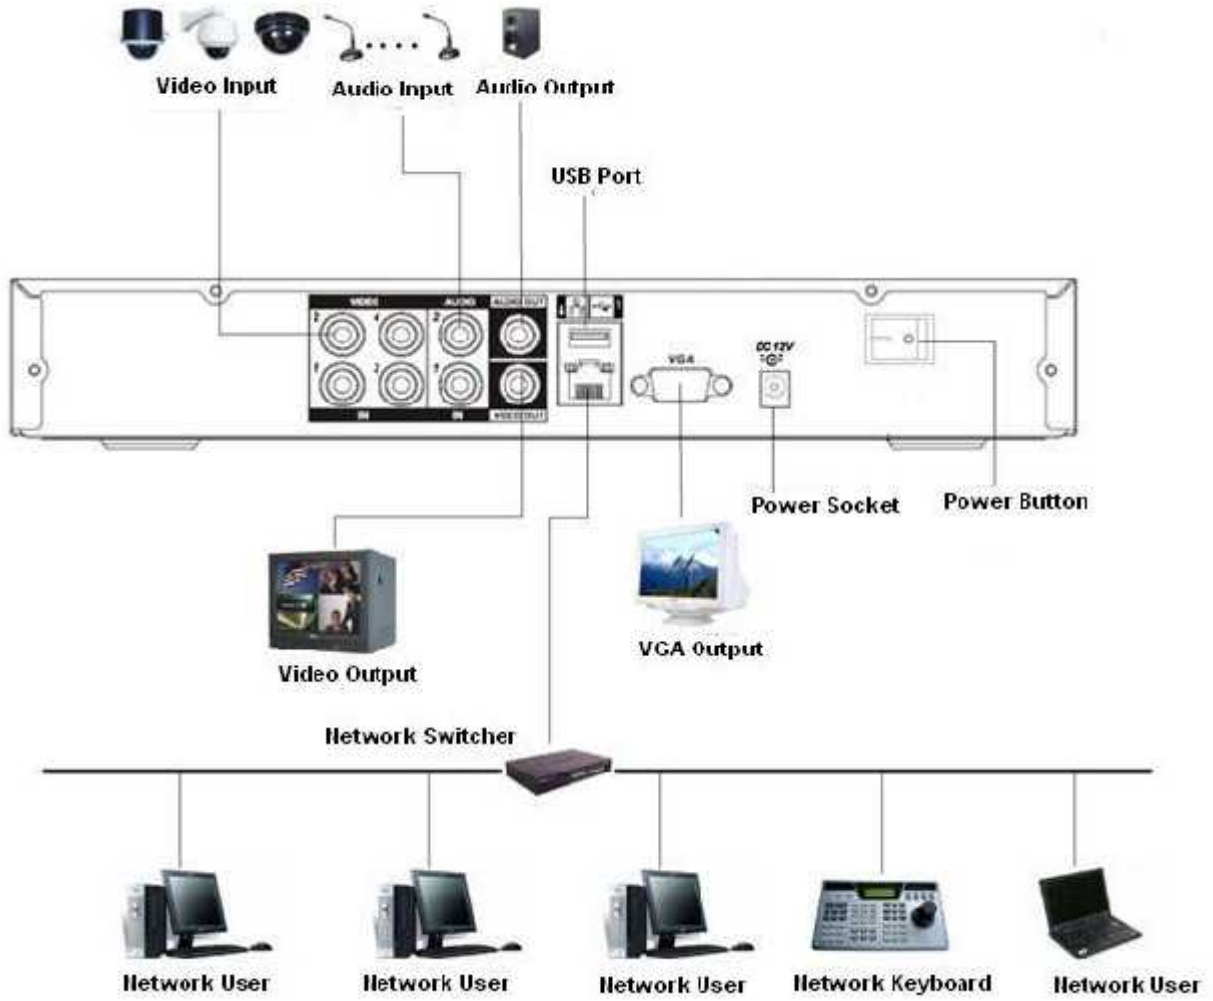


Figure 1-14

1.7.4 Full D1 Entry Level Series

The full D1 simple entry level series connection sample is shown as below. See Figure 1-15.

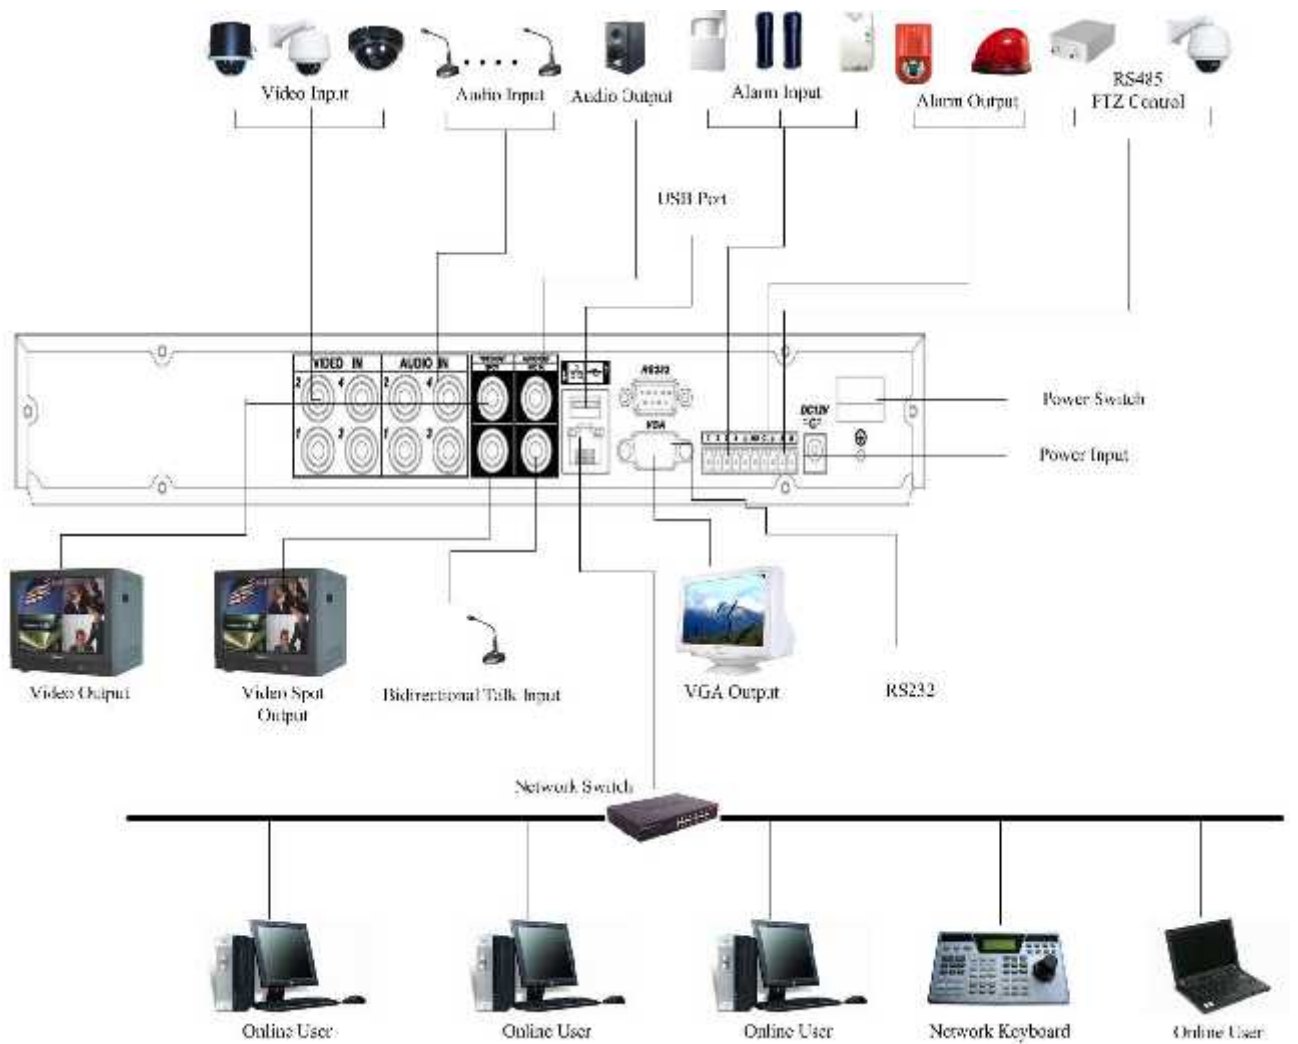


Figure 1-15

1.7.5 Full D1 Lite Series

The full D1 lite series product connection sample is shown as in Figure 1-16.

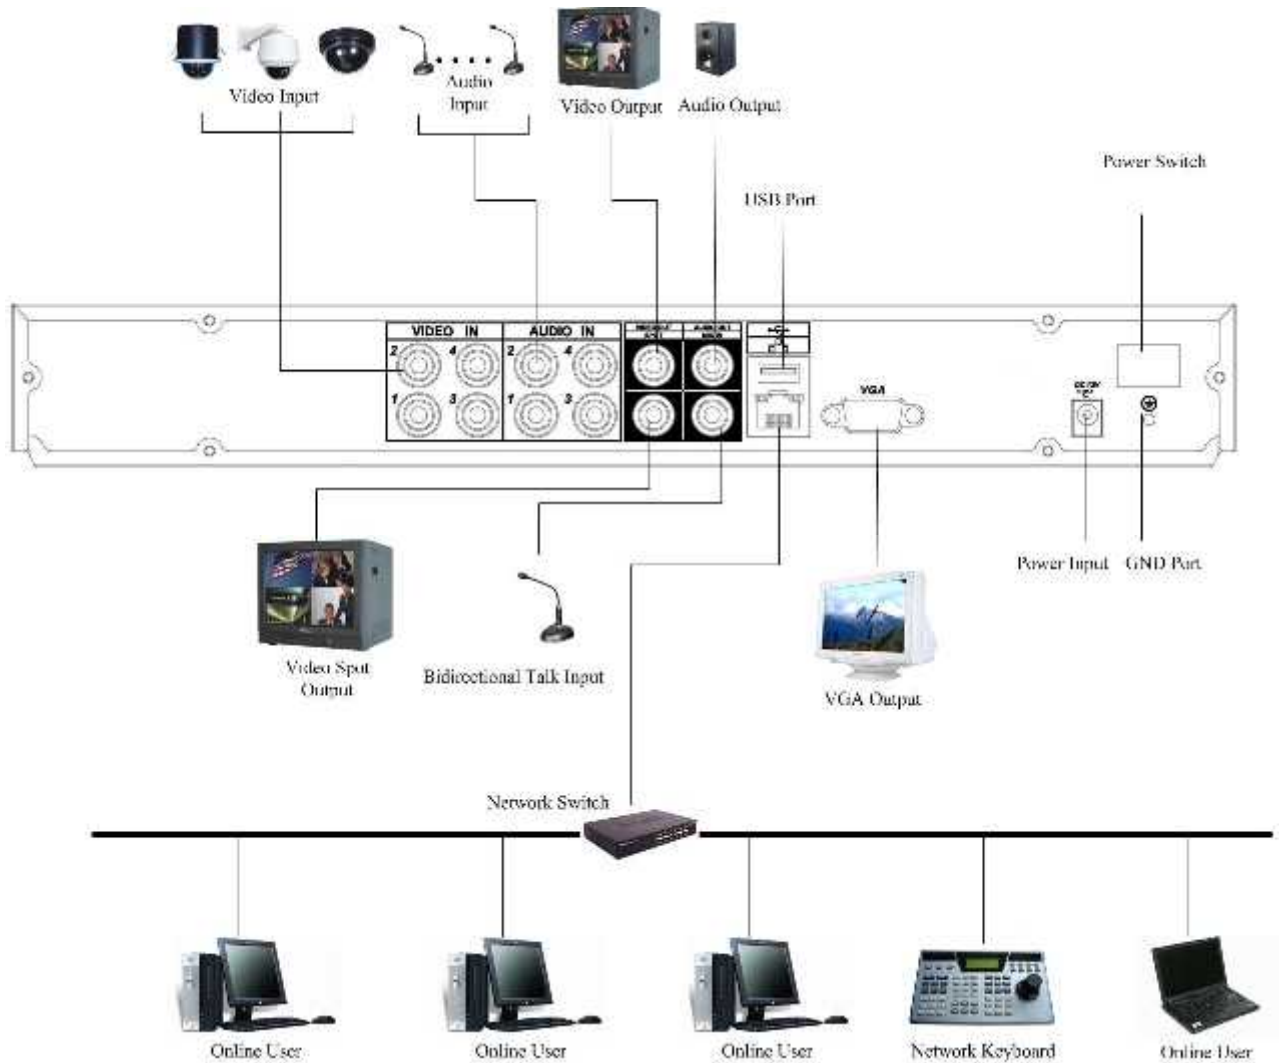


Figure 1-16

1.8 Alarm Input and Output Connection

Please note simple lite series product and full D1 lite series product do not support alarm function.

This series product has three types of alarm ports. Please refer to the following two figures for detailed information. Please note one series product does not support alarm function at all. There are two alarm input types for you to select: normal open (NO) and normal close (NC).

Important

Please refer to the specifications for the alarm input and output channel amount. Do not merely count the alarm input and out channel amount according to the ports on the rear panel.

1.8.1 Alarm Input and Output Details

One type of the alarm port is shown as in Figure 1-17.

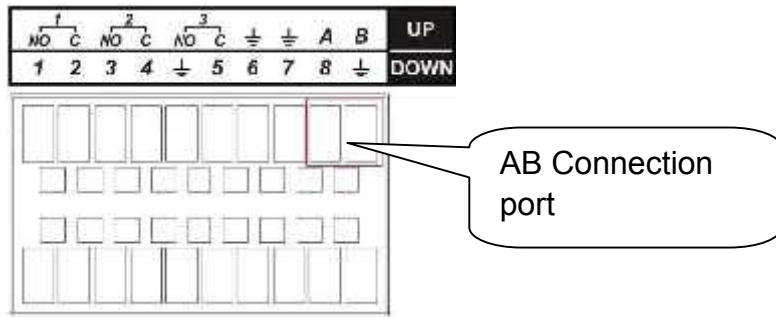


Figure 1-17

You can refer to the following sheet for alarm input and output information.

| | |
|------------------------------|---|
| Parameter | Grounding Alarm |
| | Ground line |
| Alarm Input | 1, 2, ..., 8. It becomes valid in low voltage. |
| 1-NO C, 2-NO C, 3-NO C | Three NO activation outputs. |
| 485 A/B | 485 communication port. They are used to control devices such as PTZ. Please parallel connect 120Ω between A/B cables if there are too many PTZ decoders. |

One type of the alarm port is shown as in Figure 1-18.

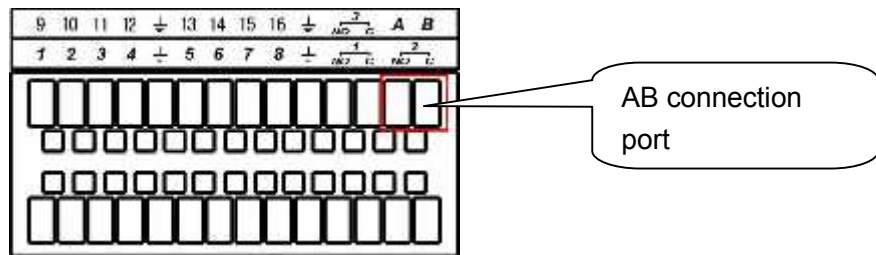


Figure 1-18

You can refer to the following sheet for alarm input and output information.

| | |
|------------------------------|---|
| Parameter | Grounding Alarm |
| | Ground line |
| Alarm Input | 1, 2, ..., 16.. It becomes valid in low voltage. |
| 1-NO C, 2-NO C, 3-NO C | Three NO activation outputs. |
| 485 A/B | 485 communication port. They are used to control devices such as PTZ. Please parallel connect 120Ω between A/B cables if there are too many PTZ decoders. |

One type of the alarm port is shown as in Figure 1-19.

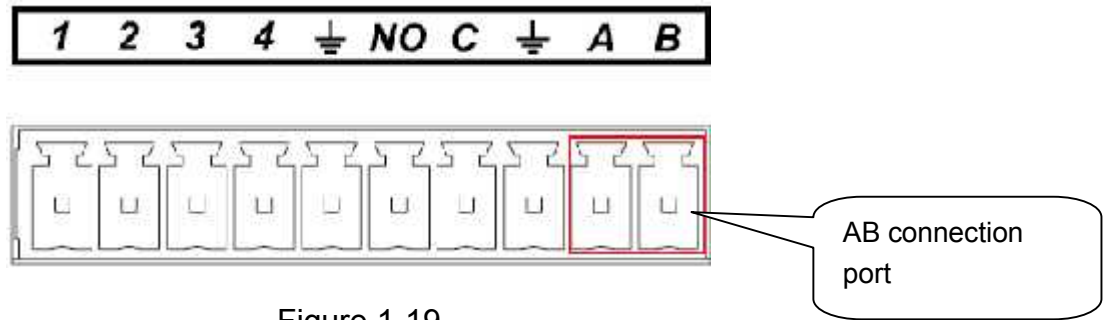


Figure 1-19

You can refer to the following sheet for alarm input and output information.

| | |
|-------------|---|
| Parameter | Grounding Alarm |
| | Ground line |
| Alarm Input | 1, 2, 3, 4. It becomes valid in low voltage. |
| NO C | One NO activation output. |
| 485 A/B | 485 communication port. They are used to control devices such as PTZ. Please parallel connect 120Ω between A/B cables if there are too many PTZ decoders. |

1.8.2 Alarm Input Port

Please refer to the following sheet for more information.

- Normal open or Normal close type.
- Please parallel connect COM end and GND end of the alarm detector (Provide external power to the alarm detector).
- Please parallel connect the Ground of the DVR and the ground of the alarm detector.
- Please connect the NC port of the alarm sensor to the DVR alarm input(ALARM)
- Use the same ground with that of DVR if you use external power to the alarm device.

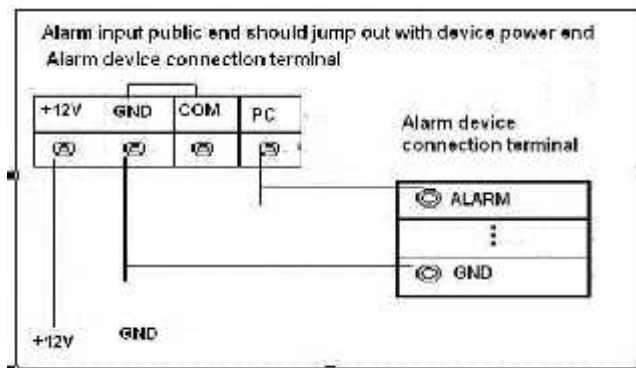


Figure 1-20

1.8.3 Alarm Output Port

- Provide external power to external alarm device.
- To avoid overloading, please read relay parameters sheet in the *User's Manual* carefully.
- RS485 A/B cable is for the A/B cable of the PTZ decoder.

2 Overview of Navigation and Controls

Important

- Slight difference may be found in the interface. All the interfaces listed below are based on the standard 1U series product.
- The simple entry level series product does not support RS232 function.
- The 8/16-channel simple entry level series product does not support schedule snapshot function and etc.
- The simple lite series product and full D1 lite series product do not support RS232, alarm and PTZ function.

2.1 Login, Logout & Main Menu

2.1.1 Login

After system booted up, system pops up the startup wizard.

Click the Cancel button; you can go to the system login interface.

Click the Next Step button; you can go to the startup wizard interface. Here you can set the system basic information. See Figure 2-1.




Figure 2-1

The system login interface is shown as in Figure 2-2.

System consists of four accounts:

- **Username:** admin. **Password:** admin. (administrator, local and network)
- **Username:** 888888. **Password:** 888888. (administrator, local only)
- **Username:** 666666. **Passwords:** 666666(Lower authority user who can only monitor, playback, backup and etc.)
- Username: default. Password: default(hidden user)

You can use USB mouse, front panel, remote control (not included in the accessory bag) or

keyboard to input. About input method: Click  to switch between numeral, English character (small/capitalized) and denotation.

Note:

For security reason, please modify password after you first login.

Within 30 minutes, three times login failure will result in system alarm and five times login failure will result in account lock!



Figure 2-2

2.1.2 Main Menu

After you logged in, the system main menu is shown as below. See Figure 2-3.

There are total six icons: search, information, setting, backup, advanced and shutdown.

You can move the cursor to highlight the icon, and then double click mouse to enter the sub-menu.



Figure 2-3

2.1.3 Logout

There are two ways for you to log out.

The first one is from menu option:

In the main menu, click shutdown button, you can see an interface is shown as below. See Figure 2-4.



Figure 2-4

There are several options for you. See Figure 2-5.



Figure 2-5

The other ways is to press power button on the front panel for at least 3 seconds, system will stop all operations. Then you can click the power button in the front panel to turn off the DVR.

Please note, before you replace the HDD, do remember shutting down the device and unplug the power cable.

2.1.4 Auto Resume after Power Failure

The system can automatically backup video and resume previous working status after power failure.

2.2 Live Viewing

After you logged in, the system is in live viewing mode by default. You can see system date, time and channel name. If you want to change system date and time, you can refer to general settings (Main Menu->Setting->General). If you want to modify the channel name, please refer to the display settings (Main Menu->Setting->Display)

| | | | | | |
|---|---|------------------|---|---|--------------|
| 1 |  | Recording status | 3 |  | Video loss |
| 2 |  | Motion detection | 4 |  | Monitor lock |

2.3 Schedule


Note:

You need to have proper rights to implement the following operations. Please make sure the HDDs have been properly installed.

After the system booted up, it is in default 24-hour regular mode. You can set record type and time in schedule interface.

In the main menu, from Setting to Schedule, you can go to schedule menu. See Figure 2-6. There are total six periods.

- Channel: Please select the channel number first. You can select “all” if you want to set for the whole channels.
- Week day: There are eight options: ranges from Saturday to Sunday and all.
- Pre-record: System can pre-record the video before the event occurs into the file. The value ranges from 1 to 30 seconds depending on the bit stream.
- Snapshot: You can enable this function to snapshot image when alarm occurs.
- Record types: There are four types: regular, motion detection (MD), Alarm, MD & alarm.

Please highlight icon  to select the corresponding function. After completing all the setups please click save button, system goes back to the previous menu.

At the bottom of the menu, there are color bars for your reference. Green color stands for regular recording, yellow color stands for motion detection and red color stands for alarm recording. The white means the MD and alarm record is valid. Once you have set to record when the MD and alarm occurs, system will not record neither motion detect occurs nor the alarm occurs.



Figure 2-6

2.4 Manual Record

Note:

Please make sure you have the record operation right and you have properly installed the formatted HDD.

You can right click mouse or in the main menu, from Advanced->Manual Record to go to record interface.

There are three statuses: schedule/manual/stop. Highlight icon “○” to select corresponding channel. See Figure 2-7.

- Manual: The highest priority. After manual setup, all selected channels will begin ordinary recording.
- Schedule: Channel records as you have set in recording setup (Main Menu->Setting->Schedule)
- Stop: All channels stop recording.



Figure 2-7

2.5 Encode

Encode interface is shown as in Figure 2-8.

- Channel: Select the channel you want.
- Type: Please select from the dropdown list. There are three options: regular/motion detect/alarm. You can set the various encode parameters for different record types.
- Compression: System supports H.264.

- Resolution: System supports various resolutions, you can select from the dropdown list. For this model, main stream supports D1/CIF/QCIF. Please note the resolution may vary due to different channels. The extra stream supports QCIF only.
- Frame rate: It ranges from 1f/s to 25f/s in NTSC mode and 1f/s to 30f/s in PAL mode.

Note:

| Model | | Note |
|-----------------------------------|------------|--|
| Standard 1U series | 4-channel | Main stream: Channel 1:D1/CIF/QCIF(1-25/30fps) Channel 2-4: CIF/QCIF(1-25/30fps),D1(1-6/7fps) Extra stream: CIF(1-25/30fps),CIF(1-6/7fps) |
| | 8-channel | Main stream: Channel 1:D1/CIF/QCIF(1-25/30fps) Channel 2-8: D1(1-6/7fps), CIF/QCIF(1-25/30fps) Extra stream: CIF(1-25/30fps),CIF(1-6/7fps) |
| | 16-channel | Main stream: Channel 1&9:D1/CIF/QCIF(1-25/30fps) Other channels :D1(1-6/7fps), CIF/QCIF(1-25/30fps) Extra stream: CIF(1-25/30fps),CIF(1-6/7fps) |
| Simple Entry Level Series | 4-channel | Main stream: D1 704×576/704×480 (The first channel can max support 1-25/30fps, the rest channels max support 6f/s or 7f/s.) CIF 352×288/ 352×240 , QCIF 176×144/176×120. Extra stream: CIF(1-25/30fps),CIF(1-6/7fps) |
| | 8-channel | Main stream: D1 704×576/704×480 (The first channel can max support 25f/s, the rest channels max support 6f/s or 7f/s.), CIF 352×288/ 352×240 , QCIF 176×144/176×120. Extra stream: CIF(1-25/30fps),CIF(1-6/7fps) |
| | 16-channel | Main stream: CIF/QCIF(1~25/30fps), 2CIF(1~12/15fps), D1(1~6/7fps) Extra stream: QCIF(1~25/30fps), CIF(1~6/7fps) |
| Simple Lite Series | 4-channel | Main stream: 1/4-ch: D1 704×576/704×480 (The first channel can support 25f/s, the rest three channels can reach 6f/s.), CIF 352×288/ 352×240, QCIF 176×144/176×120. Extra stream: QCIF(1~25/30fps), CIF(1~6/7fps) |
| Full D1 Simple Entry Level Series | 4-channel | Main stream: 1/4-ch: D1 704×576/704×480, CIF 352×288/ 352×240 , QCIF 176×144/176×120 Extra stream: CIF 352×288/ 352×240 , QCIF 176×144/176×120 The frame rate of the extra stream shall be less than the frame rate of the main stream. |
| Full D1 Lite Series | 4-channel | Main stream: 1/4-ch: D1 704×576/704×480, CIF 352×288/ 352×240 , QCIF 176×144/176×120 Extra stream: CIF 352×288/ 352×240 , QCIF 176×144/176×120 The frame rate of the extra stream shall be less than the frame rate of the main stream. |

- Bit rate type: system supports two types: CBR and VBR. In VBR mode, you can set video quality.
- Quality: There are six levels ranging from 1 to 6. The sixth level has the highest image quality.

- Video/audio: you can enable or disable the video/audio. Please note the video is enabled for main stream by default. For extra stream, please enable video first and then enable audio.
- Snapshot: Click snapshot button, you can see it contains the four items: mode/image size/image quality/snapshot frequency. Please refer to chapter 2.3.3 for detailed information.


Please highlight icon  to select the corresponding function.



Figure 2-8

2.5.1 Snapshot

2.5.1.1 Schedule Snapshot

In Encode interface, click snapshot button to input snapshot mode, size, quality and frequency.

In General interface please input upload interval.

In Schedule interface, please enable snapshot function.

Please refer to the following figure for detailed information. See Figure 2-9.

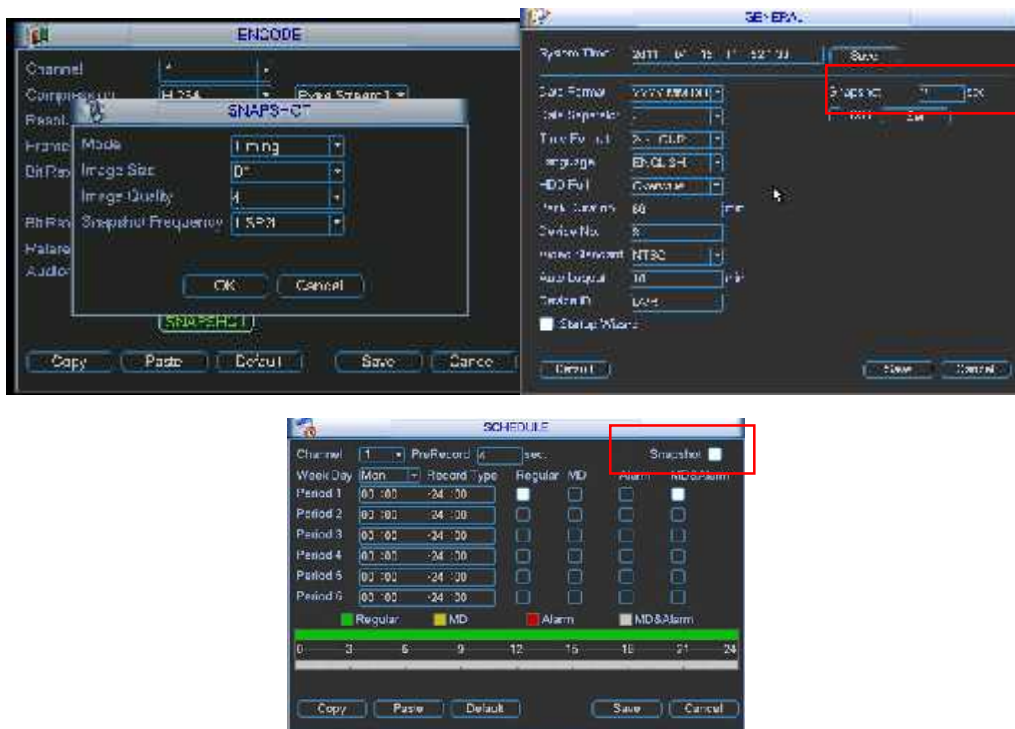


Figure 2-9

2.5.1.2 Activation Snapshot

Please follow the steps listed below to enable the activation snapshot function. After you enabled this function, system can snapshot when the corresponding alarm occurred.

- In Encode interface, click snapshot button to input snapshot mode, size, quality and frequency.
- In General interface please input upload interval.
- In Detect interface please enable snapshot function for specified channels. Or in Alarm interface please enable snapshot function for specified channels. **(Please note simple lite series product and Full D1 lite series product do not support alarm function.)**

Please refer to the following figure for detailed information. See Figure 2-10.

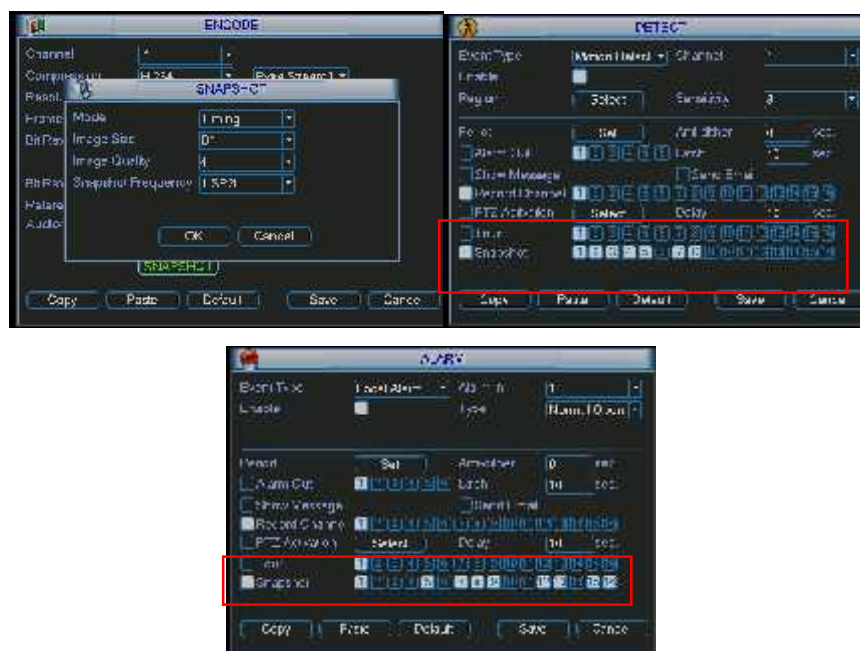


Figure 2-10

2.5.1.3 Priority

Please note the activation snapshot has the higher priority than schedule snapshot. If you have enabled these two types at the same time, system can activate the activation snapshot when alarm occurs, and otherwise system just operates the schedule snapshot.

2.5.2 Image FTP

In Network interface, you can set FTP server information. Please enable FTP function and then click save button. See Figure 2-11. Please refer to the *User's Manual* included in the resource CD for detailed information.

Please boot up corresponding FTP server.

Please enable schedule snapshot or activation snapshot (Chapter 2.3.3) and then system can upload the image file to the FTP server.

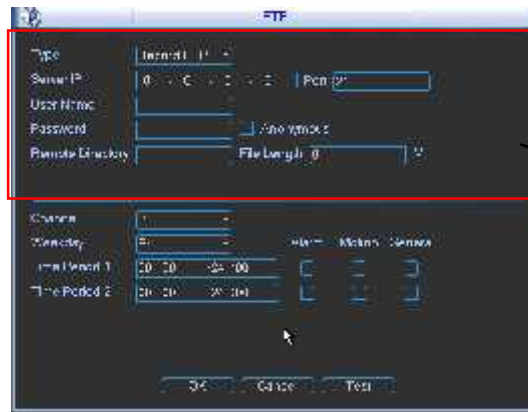


Figure 2-11

2.6 Search and Playback

Click search button in the main menu, search interface is shown as below. See Figure 2-12.

Usually there are three file types:

- R: Regular recording file.
- A: External alarm recording file.
- M: Motion detection recording file.

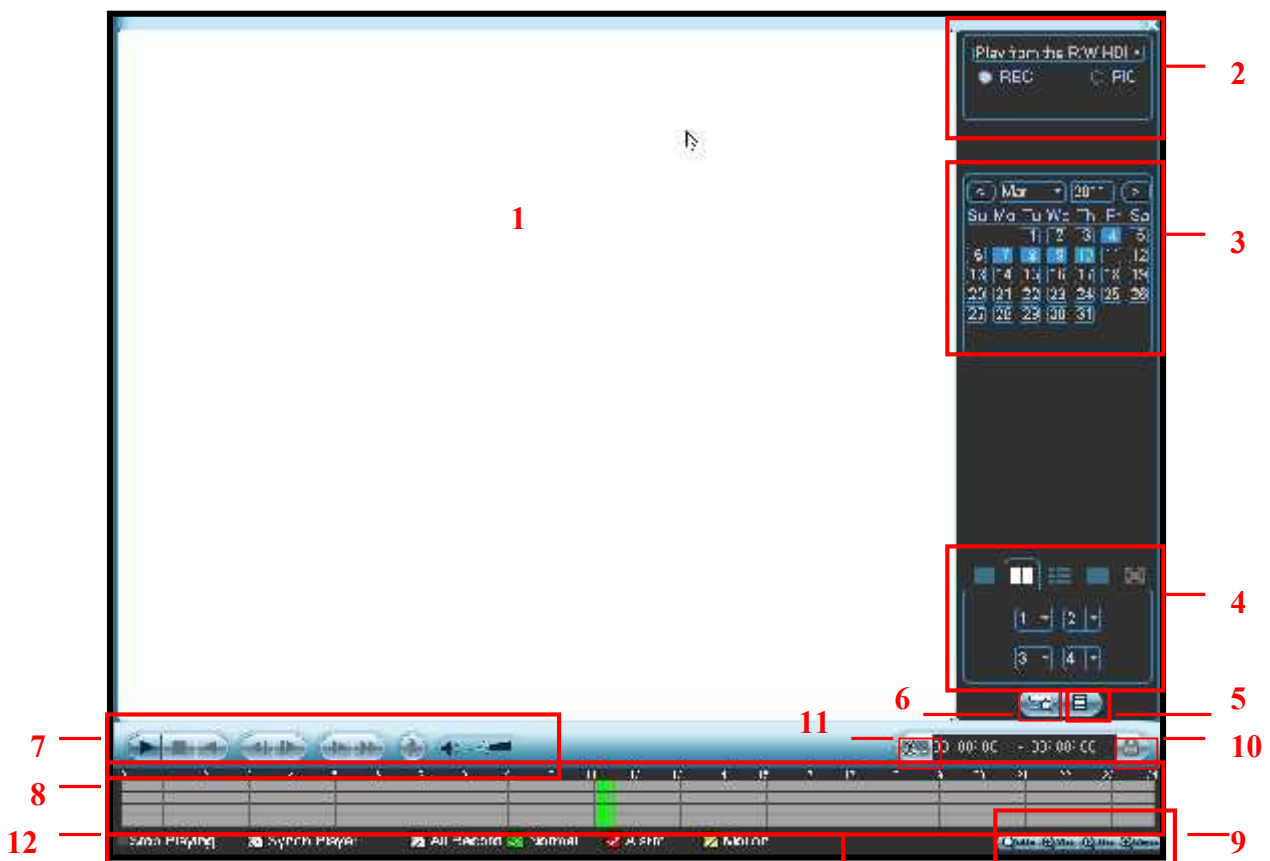
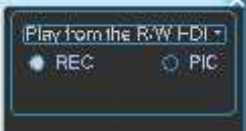
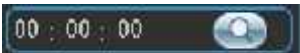





Figure 2-12

Please refer to the following sheet for more information.

| SN | Name | Function |
|----|---------|--|
| 1 | Display | ● Here is to display the searched picture or file. |

| | | | |
|--|---|--|---|
| | window | <ul style="list-style-type: none"> ●Support 1/4/9/16-window playback. | |
| 2 | Search type | <ul style="list-style-type: none"> ●Here you can select to search the picture or the recorded file. ●When there is displayed picture on the left pane, you can set the corresponding setup  | |
| 3 | Calendar | <ul style="list-style-type: none"> ●The blue highlighted date means there is picture or file. Otherwise, there is no picture or file. ●In any play mode, click the date you want to see, you can see the corresponding record file trace in the time bar. | |
| 4 | Playback mode and channel selection pane. | <ul style="list-style-type: none"> ●Playback mode: 1/4/9/16. (It may vary due to different series.) ◇ In 1-window playback mode: you can select 1-16 channels. ◇ In 4-window playback mode: you can select 4 channels according to your requirement. ◇ In 9-window playback mode, you can switch between 1-9 and 10-16 channels. ◇ In 16-window playback mode, you can switch between 1-16 and 17-32 channels. ●The time bar will change once you modify the playback mode or the channel option. | |
| 5 | File list switch button | <ul style="list-style-type: none"> ●Double click it, you can view the picture/record file list of current day. ●The file list is to display the first channel of the record file. ●The system can display max 128 files in one time. Use the ▲/▼ or the mouse to view the file. Select one item, and then double click the mouse or click the ENTER button to playback. ●You can input the period in the following interface to begin accurate search. ●File type: R—regular record; A—external alarm record; M—Motion detect record.  | |
| 6 | Card number search | <p>The card number search interface is shown as below.</p>  | |
| 7 | Playback control pane. | ▶/ | <p>Play/Pause</p> <p>There are three ways for you to begin playback.</p> <ul style="list-style-type: none"> ● The play button ● Double click the valid period of the time bar. ● Double click the item in the file list. <p>In slow play mode, click it to switch between play/pause.</p> |
| | | ■ | <p>Stop</p> |
| | | ◀ | <p>Backward play</p> <p>In normal play mode, left click the button, the file begins backward play. Click it again to pause current play.</p> <p>In backward play mode, click ▶/ to restore normal play.</p> |
| | | ◀/▶ | <p>In playback mode, click it to play the next or the previous section. You can click continuously when you are watching the files from the same channel.</p> <p>In normal play mode, when you pause current play, you can click ◀ and ▶ to begin frame by frame playback.</p> <p>In frame by frame playback mode, click ▶/ to restore normal playback.</p> |
| | | ▶ | <p>Slow play</p> <p>In playback mode, click it to realize various slow play modes such as slow play 1, slow play 2, and etc.</p> |
| | | ▶▶ | <p>Fast forward</p> <p>In playback mode, click to realize various fast play modes such as fast play 1, fast play 2 and etc.</p> |
| <p>Note: The actual play speed has relationship with the software version.</p> | | | |

| | | | |
|------------------------|--|---|--|
| | |  | Smart search |
| | |  | The volume of the playback |
| 8 | Time bar | | <ul style="list-style-type: none"> ● It is to display the record type and its period in current search criteria. ● In 4-window playback mode, there are corresponding four time bars. In other playback mode, there is only one time bar. ● Use the mouse to click one point of the color zone in the time bar, system begins playback. ● The time bar is beginning with 0 o'clock when you are setting the configuration. The time bar zooms in the period of the current playback time when you are playing the file. ● The green color stands for the regular record file. The red color stands for the external alarm record file. The yellow stands for the motion detect record file. |
| 9 | Time bar unit | | <ul style="list-style-type: none"> ● The option includes: 24H, 12H, 1H and 30M. The smaller the unit, the larger the zoom rate. You can accurately set the time in the time bar to playback the record. ● The time bar is beginning with 0 o'clock when you are setting the configuration. The time bar zooms in the period of the current playback time when you are playing the file. |
| 10 | Backup | | <p>Select the file(s) you want to backup from the file list. System max supports files from four channels. Then click the backup button, now you can see the backup menu. Click the start button to begin the backup operation. Check the file again you can cancel current selection. System max supports to display 32 files from one channel.</p> |
| 11 | Clip | | <ul style="list-style-type: none"> ● It is to edit the file. ● Please play the file you want to edit and then click this button when you want to edit. You can see the corresponding slide bar in the time bar of the corresponding channel. You can adjust the slide bar or input the accurate time to set the file end time. Click this button again and then save current contents in a new file. . |
| 12 | Record type | | In any play mode, the time bar will change once you modify the search type. |
| 13 | Smart search | | <ul style="list-style-type: none"> ● When system is playing, you can select a zone in the window to begin motion detect. Click the motion detect button to begin play. ● Current button is null once the motion detect play has begun. ● The system will take the whole play zone as the motion detect region by default. ● The motion detect play stopped once you switch the play file. ● Operations such as set time bar, click the play button, or any file list operation will stop current motion detect play. |
| Other Functions | | | |
| 14 | Other channel synchronization switch to play when playback | | When playing the file, click the number button, system can switch to the same period of the corresponding channel to play. |
| 15 | Digital zoom | | When the system is in full-screen playback mode, left click the mouse in the screen. Drag your mouse in the screen to select a section and then left click mouse to realize digital zoom. You can right click mouse to exit. |

Note:

All the operations here (such as playback speed, channel, time and progress) have relationship with hardware version. Some series DVRs do not support some functions or playback speeds.

2.7 Network Setup

Here is for you to input network information. See Figure 2-13.

- IP address: Here you can input IP address.

- DHCP: It is auto search IP function. When enable DHCP function, you can not modify IP/Subnet mask /Gateway. These values are from DHCP function. If you have not enabled DHCP function, IP/Subnet mask/Gateway display as 0. You need to disable DHCP function to view current IP information. Besides, when PPPoE is operating, you can not modify IP/Subnet mask /Gateway.
- TCP port: Default value is 37777.
- UDP port: Default value is 37778.
- HTTP port: Default value is 80.
- Max connection: system support maximal 20 users. 0 means there is no connection limit.
- Transfer mode: Here you can select the priority between fluency/video qualities.
- Network download: System can process the downloaded data first if you enable this function.
- Advanced setting: Please refer to the *user's manual* included in the resource CD for detailed information.

After completing all the setups please click save button, system goes back to the previous menu.

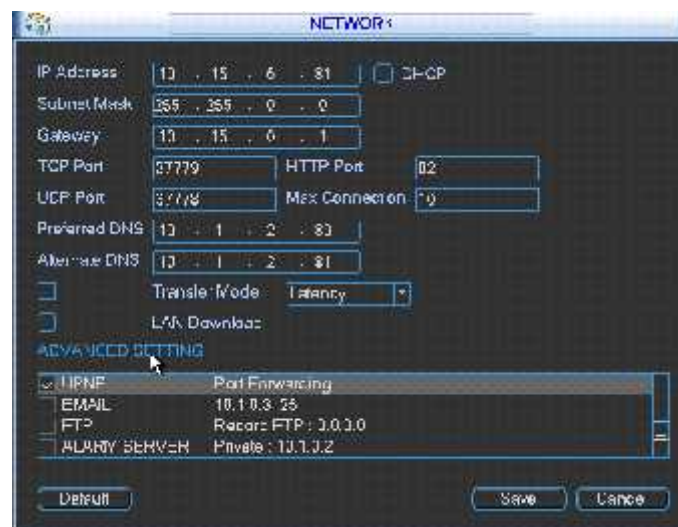


Figure 2-13

2.8 Pan/Tilt/Zoom

Please note:

- Slight difference may be found in the user's interface, due to various protocols.
- Please make sure the speed domes A/B cables are properly connected to the A/B ports of DVR.
- You have properly set PTZ information.
- Please switch camera monitor channel to current window.
- **The simple lite series product and Full D1 lite series product do not support PTZ function.**

2.8.1 PTZ Setup

The pan/tilt/zoom setup includes the following items. Please select channel first. See Figure 2-14.

- Protocol: Select corresponding PTZ protocol such as PELCOD.
- Address: Input corresponding PTZ address.
- Baud rate: Select baud rate.
- Data bit: Select data bit. Default value is 8.
- Stop bit: Select stop bit. Default value is 1.

- Parity: There are three choices: none/odd/even. Default value is none.

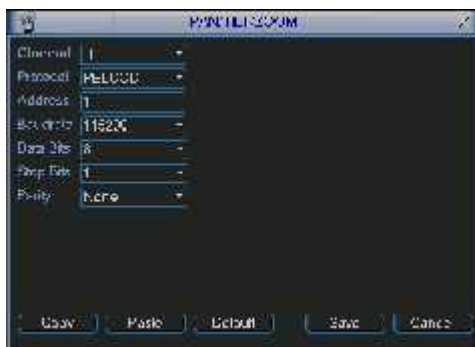


Figure 2-14

After completing all the setups please click save button, system goes back to the previous menu.

2.8.2 PTZ Operation

In one window display mode, right click mouse (click "Fn" Button in the front panel or click "Fn" key in the remote control). The interface is shown as in Figure 2-15.



Figure 2-15

Click Pan/Tilt/Zoom, the interface is shown as below. See Figure 2-16.

Here you can set the following items:

- Step: value ranges from 1 to 8.
- Zoom
- Focus
- Iris

Click icon  and  to adjust zoom, focus and iris.



Figure 2-16

In Figure 2-16, please click direction arrows (See Figure 2-17) to adjust PTZ position. There are total 8 direction arrows. Please note if you use remote control, you can use just four directions (Up/down/left/right).

The speed value ranges from 1 to 8.



Figure 2-17

2.8.3 3D Intelligent Positioning Key

In the middle of the eight direction arrows, there is a 3D intelligent positioning key. See Figure 2-18. Please note, this function needs protocol supported and can only be operated by mouse. Click this key, system goes back to the single screen mode. Drag the mouse in the screen to adjust section size. It can realize PTZ automatically.



Figure 2-18

Here is a sheet for you reference.

| Name | Function key | function | Shortcut key | Function key | function | Shortcut Key |
|-------|--------------|----------|--------------|--------------|----------|--------------|
| Zoom | | Near | ▶ | | Far | ▶▶ |
| Focus | | Near | ◀ | | Far | ▶ |
| Iris | | close | ◀ | | Open | ▶ |

You can click set button in Figure 2-16 (or click REC button in the front panel) to set preset, tour, and pattern.

You can click page switch button in Figure 2-16 (or click Fn button in the front panel) to call main function.

3 Web Operation

Important

- Slight difference may be found in the interface. All the interfaces listed below are based on the standard 1U series product.
- The simple entry level series product does not support RS232 function.
- The 8/16-channel simple entry level series product does not support schedule snapshot function and etc.
- The simple lite series product and full D1 lite series product do not support RS232, alarm and PTZ function.

3.1 Network Connection

Before web operation, please check the following items:

- Network connection is right
- DVR and PC network setup is right. Please refer to network setup(main menu->setting->network)
- Use order ping `***.***.***.***`(* DVR IP address) to check connection is OK or not. Usually the return TTL value should be less than 255.
- System can automatically download latest web control and the new version can overwrite the previous one.
- If you want to un-install the web controls, please run `uninstall webrec2.0.bat` to auto delete the control or you can go to `C:\Program Files\webrec` to delete Single folder.

3.2 Login

Open IE and input DVR address in the address column. For example, if your DVR IP is 10.10.3.16, then please input `http:// 10.10.3.16` in IE address column.

System pops up warning information to ask you whether install webrec.cab control or not. Please click yes button.

If you can't download the ActiveX file, please modify your IE security setup.

After installation, the interface is shown as below. See Figure 3-1.

Please input your user name and password.

Default factory name is admin and password is admin.

Note: For security reasons, please modify your password after you first login.



Figure 3-1

3.3 Main Window

After you logged in, you can see the main window. See Figure 3-2.

Click the channel name on the left side; you can view the real-time video.

For detailed operation information, please refer to the *User's Manual* included in the resources CD.



Figure 3-2

4 Appendix Toxic or Hazardous Materials or Elements

| Component Name | Toxic or Hazardous Materials or Elements | | | | | |
|---------------------------|--|----|----|-------|-----|------|
| | Pb | Hg | Cd | Cr VI | PBB | PBDE |
| Sheet Metal(Case) | ○ | ○ | ○ | ○ | ○ | ○ |
| Plastic Parts (Panel) | ○ | ○ | ○ | ○ | ○ | ○ |
| Circuit Board | ○ | ○ | ○ | ○ | ○ | ○ |
| Fastener | ○ | ○ | ○ | ○ | ○ | ○ |
| Wire and Cable/AC Adapter | ○ | ○ | ○ | ○ | ○ | ○ |
| Packing Material | ○ | ○ | ○ | ○ | ○ | ○ |
| Accessories | ○ | ○ | ○ | ○ | ○ | ○ |

Note

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

Note

- For detailed operation introduction, please refer to our resource CD included in your package for electronic version of the *User's Manual*.
- This quick start guide is for reference only. Slight difference may be found in the user interface.
- All the designs and software here are subject to change without prior written notice.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website or contact your local service engineer for more information.